

Oil Sampling Kit Instructions

Atlas Copco

CAUTION: Handling hot oil can cause burning.




01. Cut a tube to approximately 50cm in length.
02. Insert the tube into the pump wheel and securely tighten it.

03. Take the sampling bottle, unscrew the cap, and screw it to the pump.

04. Make sure the oil is sufficiently mixed before taking the sample. If necessary, run the unit for 5 minutes before proceeding.



05. Once the oil is sufficiently mixed, turn off the engine.
06. Safely remove the oil filling plug from the compressor vessel, ensuring that the vessel is depressurized.

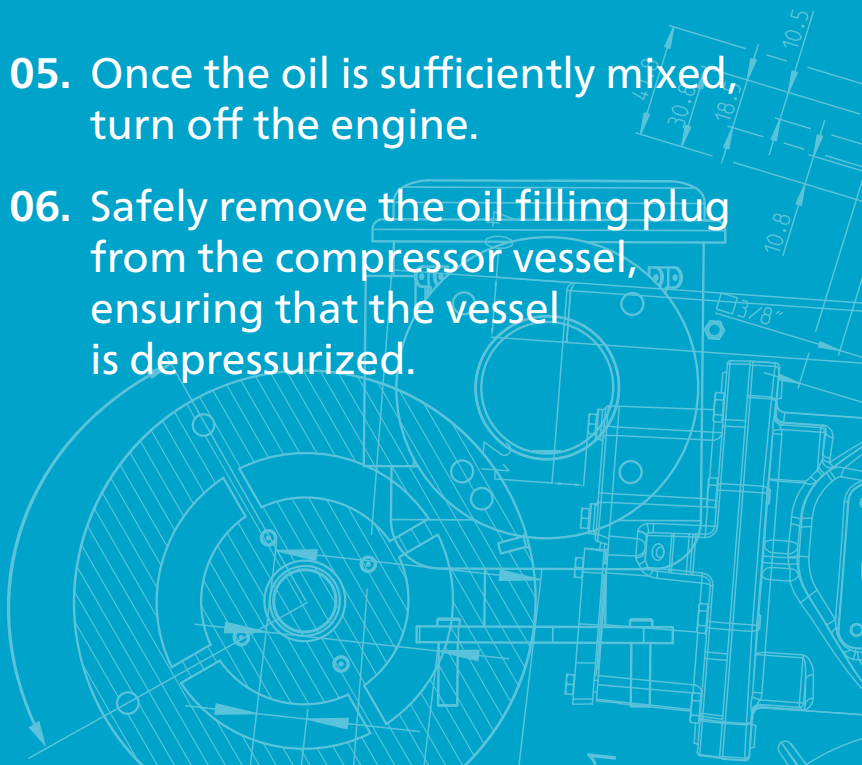

Oil Sampling Kit Instructions

Atlas Copco



07. Insert the plastic tube into the vessel for approximately 30cm.
08. Pull back the pump's plunger, allowing the sampling bottle to slowly fill with oil.

09. Fill the sampling bottle up to the designated blue line.
10. Remove the pump from the vessel and re-install the oil filling plug.



11. Unscrew the sampling bottle from the pump and replace the cap on the bottle.
12. Place the bottle into the provided white plastic bag, which is included in the kit, and send it to the lab.
(Postage costs must be covered.)

13. Disconnect the tube from the pump and clean the pump using paper or cloth; do not use detergents.
14. Discard the tube.

